

Dorset Pedicure Spa Chair

plumbing or non-plumbed version

— Relaxor System —

POWER

Activates Massage System

- Turn On: Press PWR.
- Turn Off: Press PWR again.
- **15 and 30 minute Timers:**
Green light = 15 minute Timer.
Hold down Power:
Amber light = 30 minute Timer.
- Unit may also be turned on by pressing either ZONE key.
To restart after Timer shuts off:
- Press PWR or either ZONE key.

HEAT

Activates Heat.

- Press LO (Amber light) to turn Low Heat on.
- Press HI (Red light) to turn High Heat on.

Works with massage or independently.
30 minute Timer

To continue after Timer shuts off, press LO or HI button again.

ZONES

(Green light indicates active Zone)

Activates Massage System

- Zone 1 once to activate massage.
Press again to deactivate.
- Zone 2 once to activate massage.
Press again to deactivate.

The location of each zone varies with individual chair styles.

INTENSITY

Controls massage motors INTENSITY during all modes. Press (+) to increase and (-) to decrease Intensity.



MASSAGE MODES

(Green light indicates active Mode)

SELECT -

Lets you choose zones for steady massage.

- Press SELECT.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

PULSE -

Massage turns On and Off to provide a pulsing action.

- Press PULSE.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

WAVE -

Massage moves up and down in a wave-like action.

- Press WAVE.
- Press both Zones to activate.
- Press any other MODE to cancel.

SPEED

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE.

Press (+) to increase and (-) to decrease speed.

NOTE: Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

SAVE THESE INSTRUCTIONS!