



# Towel Steamer User Manual

(ITEM# YAN-TSAPP-24/36/48/72/120)

## Operating Instructions

---

1. These products are rated at 110 VAC, 700W, and 6 amps.
2. Plug the power and adjust the temperature to 65°C for towel steamer and adjust to 80°C- 95°C if using as a food steamer.
3. Fill up the water tank with **distilled** water, no tap or ground water.
  - For Model 24, open the door and add 500cc – 1,000cc water directly into the water tank.
  - For Model 36/48/72/120, add water to the water intake on the top of the unit. Fill up the tank until the light turns on; otherwise, the heating element will be easily damaged.
4. When there is not enough water, the heating element will automatically turn off, and the warning light will be on.
5. To preserve the life expectancy of the heating element, **always maintain the water level and fill up the water before the light turns on.**
6. The machines use the water level sensor to check the water level, so always keep the machine at a flat surface to make sure all the sides are balanced, otherwise the heating element will burn off and won't be able to cut off the electricity from the heating element.

## Maintenance

---

1. The water tank needs to be cleaned every 2 – 3 months.
2. Make sure the electricity is turned off and the machine has cooled down before you clean the machine.
3. After the machine cools down, loosen the two screws in the bottom front of the machine.
4. Remove the black tub in the front.
5. Use a container or bucket to hold the leftover water from the machine.
6. Fill more water in the water tank for couple times to wash the inside of the machine. **Inside of the Tub is smaller, so slowly add the water into the water tank.**
7. Clean the black tub from the left and right side.
8. Put back all the parts together after the machine is cleaned.

**Warning: Please, do not wash the machine directly in the water, Or the machine will be damaged.**

## Warning

---

1. Do not add any fragrances to the machine, or its life expectancy will be shortened, even damaged.
2. If there are any broken wires or parts, please contact the original manufacturer for a replacement to prevent any further damage.
3. When the machine is being used, please be cautious with high temperatures.
4. Keep children away from the machine due to the high temperature.
5. Stand away from towel steamer when opening the towel steamer. The hot air or steam which escapes can cause burns to hands, face and/or eyes.
6. The machine cannot be immersed in the water.
7. After using the machine, keep the steamer's door open to prevent the odor. 10. If you are using it as a food steamer, please set the timing to one hour and thirty minutes or above.

## Safety Precautions

---

1. Stop all operations when the machines can't function normally, or it is damaged.
2. Do not put the plug or wires into the water.
3. Keep the machine away from the sink, bathtub, kitchen, or any other water utilities.
4. Keep the wires away from high temperature.
5. Due to the safety issues, it comes with a safety ground plug. Please do not remodel the plug.
6. Do not touch the plug when your hands are wet.
7. Do not take the machine apart due to chances of electric leakage and shock.

## Trouble Shooting

---

Problem	Cause	Solution
Power light not on	The plug is not connecting well with the wall socket	Use an instrument to check the wall sockets. Unplug the plug and wait for 10 seconds to put back in.
No heating	Heating element went bad	Replace heating element
Towel Steamer has odor	Towel is causing the odor	The towel steamer shouldn't have any odor; the best way is to change the towels. Don't use any fragrances.
No water in heating element room	Clogged pipes	Check the black tube in the bottom front of machine, and clean them if necessary
Towel Steamer is leaking	Too much water	Only fill up the water till the light turns on

If you have any problem from above, please contact with your manufacturer or contact with our customer Services.