

!!!! NOTICE !!!!

Your Dryer is equipped with a cool down cycle that will run for sixty seconds after the set time is reached to safely cool the dryer cabinet. During this time, the time will blink OFF and the power button will be inactive and will not turn the dryer off.

INSTALLATION, OPERATING, & MAINTENANCE INSTRUCTIONS FOR YOUR NEW HAIR DRYER

Installation:

1. Use proper care when mounting the dryer into a chair or into leg assembly.
2. Plug the power supply cord into any 110-115 volt 60 cycle AC outlet.
3. **Place the dryer 6-8 inches from the wall to prevent damage to the hood when it is raised, and to allow for proper air intake through the air filter located on the cabinet door.**
4. Hood assembly is adjustable, but may be tight when first received. With hood assembly placed into cabinet, move slide front to back several times, if needed, to loosen adjustment.

Operation:

1. Raise hood to desired height before seating the patron.
2. **For instantaneous heat, leave the hood upright for 10 seconds before lowering.** This allows warm air to build up and prevents a cold stream of air from hitting the client's wet head.
3. Place the patron under the dryer and lower the hood to the proper position for drying.
4. Turn dryer on.
5. Set the dryer heat control to the degree of heat desired using +/- buttons.
6. Set the timer to the desired time using +/- buttons.
7. **For Collins Solair dryers only:** If desired, turn on ion generator by pressing Ion button.
8. Once time set is reached, heat will turn off, but motor will continue to run for a two minute cool down cycle.

Maintenance Instructions:

Check Filter Weekly and Clean if Needed: Efficient operation is dependent upon the free, unobstructed flow of air through the air intake filter on the dryer cabinet door. For best results, inspect the filter weekly and clean if necessary. To remove the filter, pull up on the filter tab, remove the filter, wash in warm soapy water, rinse with clean water, shake out the excess water, allow to dry, and replace the filter into the dryer cabinet door.

Clean Hood as Needed: Open the metal clamp on the hood band and slip the clamping strap off the hood. The inner hood will drop out. Wash the inner hood in warm water with soap or a mild detergent. Remove the outer hood and upper stack from the cabinet and wash outer hood in warm water with soap or a mild detergent. **CAUTION: DO NOT USE SOLVENTS TO CLEAN OR WASH HOODS.** Lay outer hood and upper stack assembly onto a flat surface. Insert the inner hood, **NOTE THE POSITION OF THE EAR COVERS IN THE INNER HOOD SHOULD BE POSITIONED TO THE LEFT AND RIGHT ALLOWING AIR TO**

FLOW FREELY THROUGH THE HOOD HOLES SURROUNDING THE BACK, CROWN AND FRONT OF THE HEAD.
Replace the hood band placing the latch to the back of the hood.

CAUTION: BEFORE SERVICING DRYER, UNPLUG FROM WALL SOCKET

User Instructions:

1. Your dryer is equipped with a heat-sensing thermostat. If the dryer malfunctions and becomes too hot, the thermostat will shut off the heating element. After cooling, the heating element will again operate normally.
2. If the dryer will not be used for a period of time, wrap the cord around the upper duct assembly and store in a cool dry area.

Warranty:

Your dryer is warranted to be free of defects in material and workmanship for a period of two years from date of shipment from factory. Seller shall either provide repair parts to the customer at no charge, or the seller will perform warranty repairs, for products returned to designated service center. Warranty applies to the original purchaser only. Warranty does not apply to the finish of the cabinet or plastic hood, to any damage caused by water or fire or where there is evidence of improper use, tampering, or mishandling of the equipment.

Seller shall not be liable for damage to any person or any property other than the dryer covered by warranty.

Seller reserves the right to make changes in the design of and improvements in its dryers without imposing any obligation upon the seller to install the same on dryers heretofore manufactured.

No person is authorized to change the terms of this warranty.

CONTACT THE AUTHORIZED DISTRIBUTOR FROM WHOM YOU PURCHASED DRYER TO INITIATE WARRANTY CLAIMS OR CONTACT MANUFACTURER DIRECTLY IF YOU HAVE YOUR ORIGINAL SALES ORDER NUMBER TO REFERENCE.



WARNING:

This product can expose you to chemicals, including lead, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov/furniture