



Aurora Front Panel Installation Manual

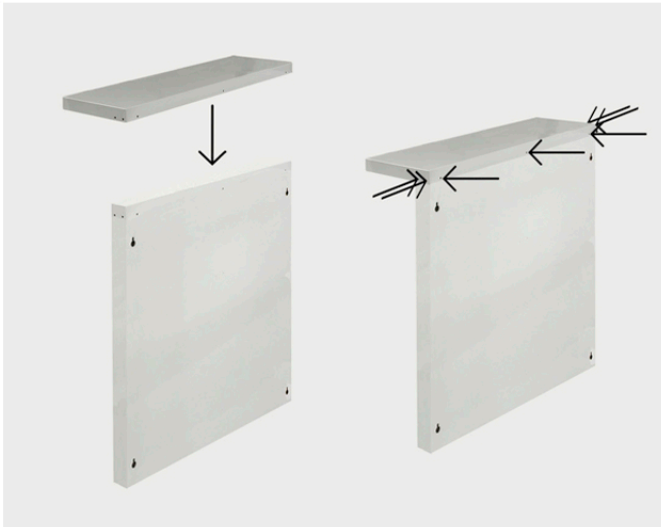

After installation of the base, you're ready to install the front panel

Install the countertop onto the front panel screw in 7 screws onto the front and sides to secure the countertop.

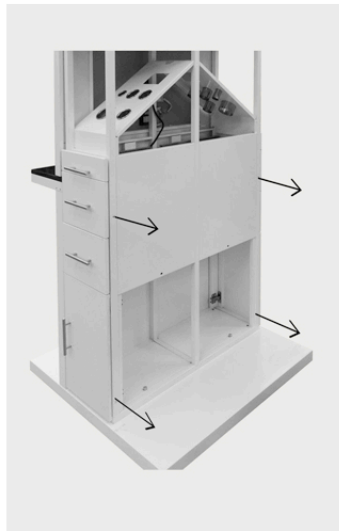

Screw into the pre-drilled holes 4 screws leaving approximately 1/4" of the screws exposed, These screws will be used as hangers for the front panel.



Line up the holes in the front panels to the screws and attach the panel

Put the granite on top of the countertop before installing the mirror.

You can secure the granite to the countertop with Velcro (not provided)

Questions about your assembly please call 877-805-0755