

Super Relax 2

Chair Installation





1

Attach metal frame from inside chair box to spa base as shown. Line up holes and attach with 4 screws.



2

Align back of the chair to install as shown (2 people needed).



Once aligned clip underneath and back should be attached.



Chair should now look like this once back is installed.




5

Attach the arms one at a time to frame on base as shown - front first.



6


Attach back end of the arm to the frame base.

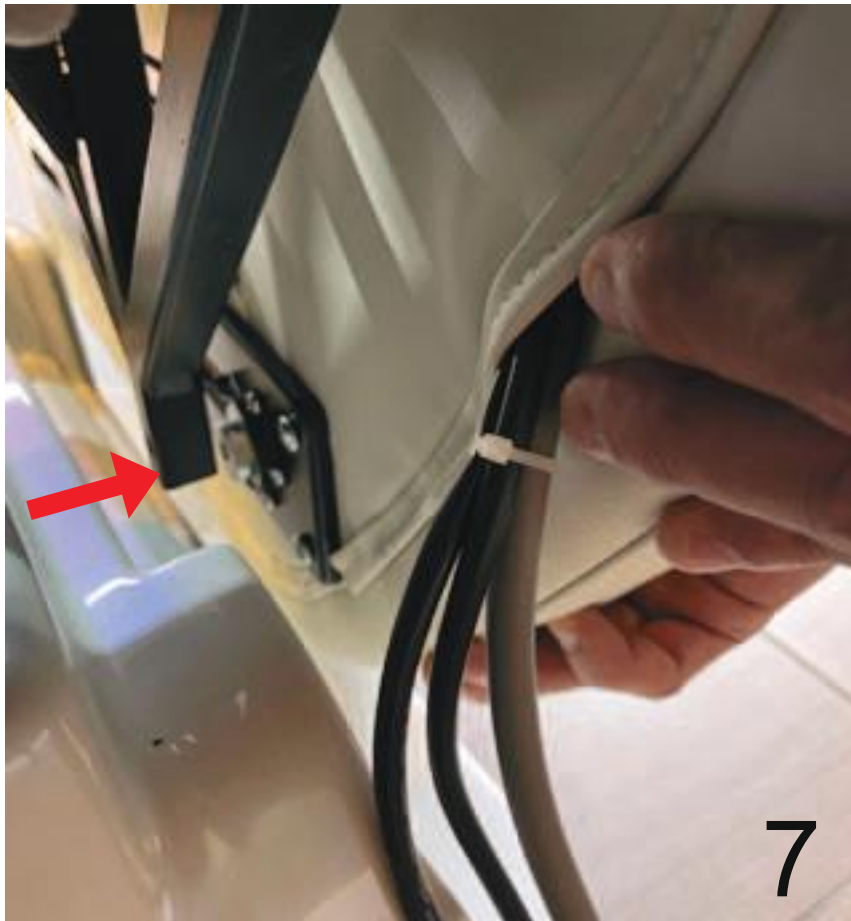

Slide arm all the way to the back



Attach screw to allen key as shown

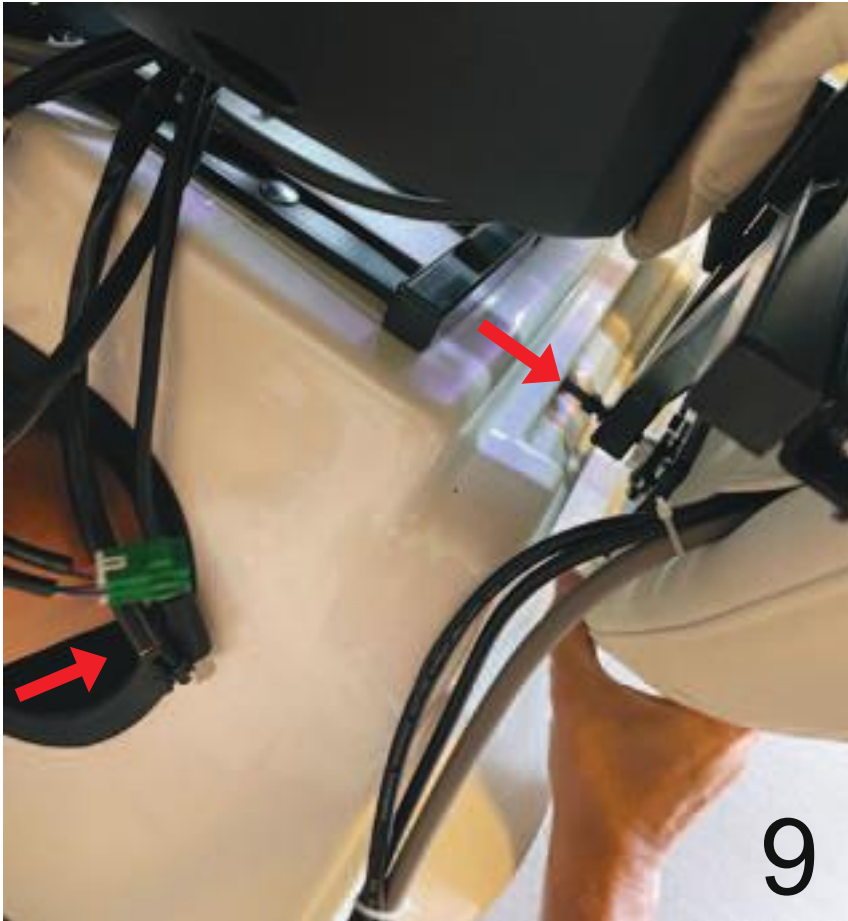

This screw from Pic 8 has to be mounted to the chair frame via the circular hole in the base to get to that hole, place arm with screw and allen key, through the hole in the back of the base and put the screw through the circular hole to attach to the frame.



Shows the screw being attached to the frame via a circular hole.






Push armrest to the regular position.



Repeat the same process on the other side to install the other armrest.

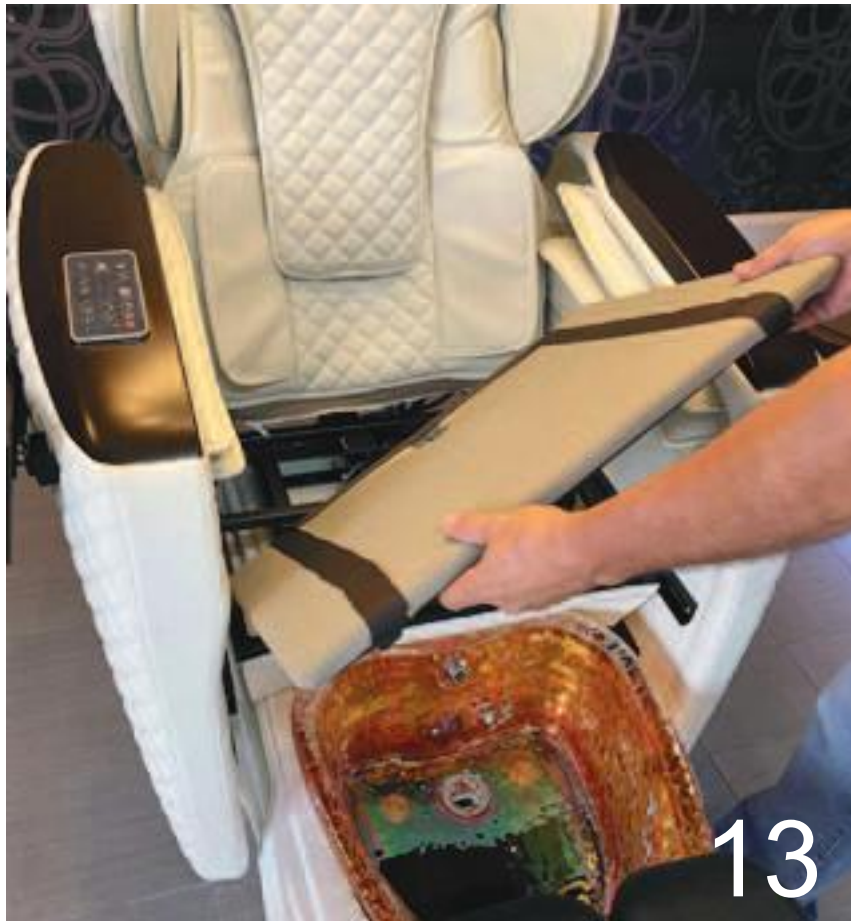

Attach bottom seat board to the seat frame.



Align up correctly.



Air tube emerging from seat base have to go through the hole in seat board when attaching the cushioned seat to the base.



Attach zipper from cushioned seat to back of the chair.



Make sure the seat is aligned properly with the back as shown.



Cable Connections



21/A Attach Brown Hose to Brown Hose
(Left connection to "T" Hose)



21/B Attach Brown Hose to Brown Hose
(Right connection to "T" Hose)



22 Attach Green Cable to Green Cable

Cable Connections



23 Attach White connect electric jack to another White electric jack



24 Attach White Hose to another White Hose.



25 Attach Black connect electric jack to another Black electric jack



26 Attach Black connect electric jack to another White electric jack

Cable Connections



27 Attach connect electric Power to another Power Cable.



28 connect electric Power Cable to wall outlet.



Unit is READY for USE.